



GAMING, AMUSEMENT AND INDUSTRIAL COMPONENTS

INSTRUCTIONS FOR SUZO/HAPP TFTOPPER KIT PN 104-05891

Notes: 1 Power supply 80-0414-10 is recommended to power the complete unit. Otherwise please note that the ORANGE wire on the TFTOPPER power connector is to be connected to +12VDC And the BLACK wire is to be connected to common. Power supply is not included with TFTOPPER KIT.

2 A base is required. Select one of the following

- a ANGLE BASE PN 104-0010-1
- b FLAT BASE PN 104-0020-1
- c RADIUS BASE PN 104-0015-1

These instructions will guide you through the process for installing the Suzo/Happ TFTOPPER kit onto the TOPPER.


Where applicable please see included photos for details of connectors, orientation, etc...

Before beginning please verify that all parts are present and in good condition.


If parts are missing or damaged please contact your sales person or a customer service representative at Happ 888-289-4277.

Enclosed you will find


- | | | | |
|----|---------------------------|------------------------------------|---------|
| 1: | TFTOPPER | PN 104-05892 | 1 Piece |
| 2: | Media Board | Media Player | 1 Piece |
| 3: | 128MB Memory Card | PN Z5197 | 1 Piece |
| 4: | Power Adaptor "Y" Harness | PN 96-0781-00 | 1 Piece |
| 5: | PCB Mounting Feet | PN 49-1019-00 | 1 Piece |
| | | NOTE; There are 4 feet in the Bag. | |
| 6: | Instruction Manual | INS-0157
(Not Shown) | 1 Piece |

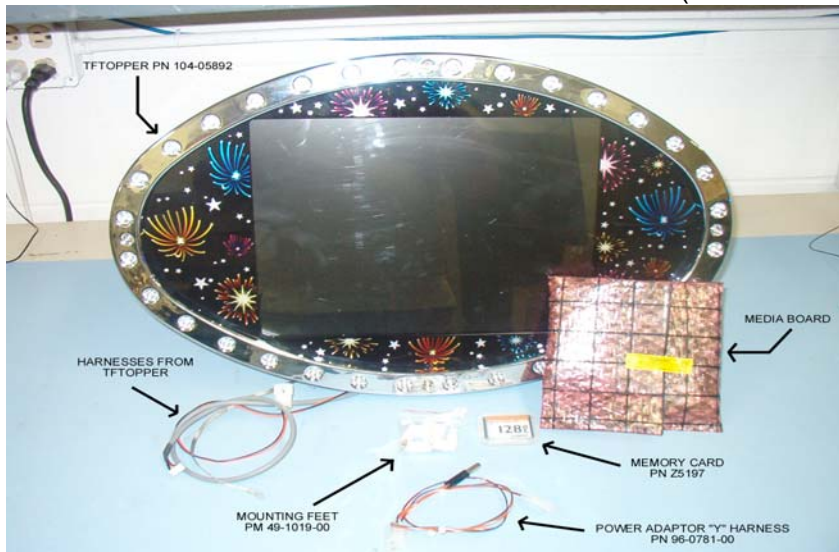


Please refer to the following picture for identification of the connectors on the Power “Y” Adaptor

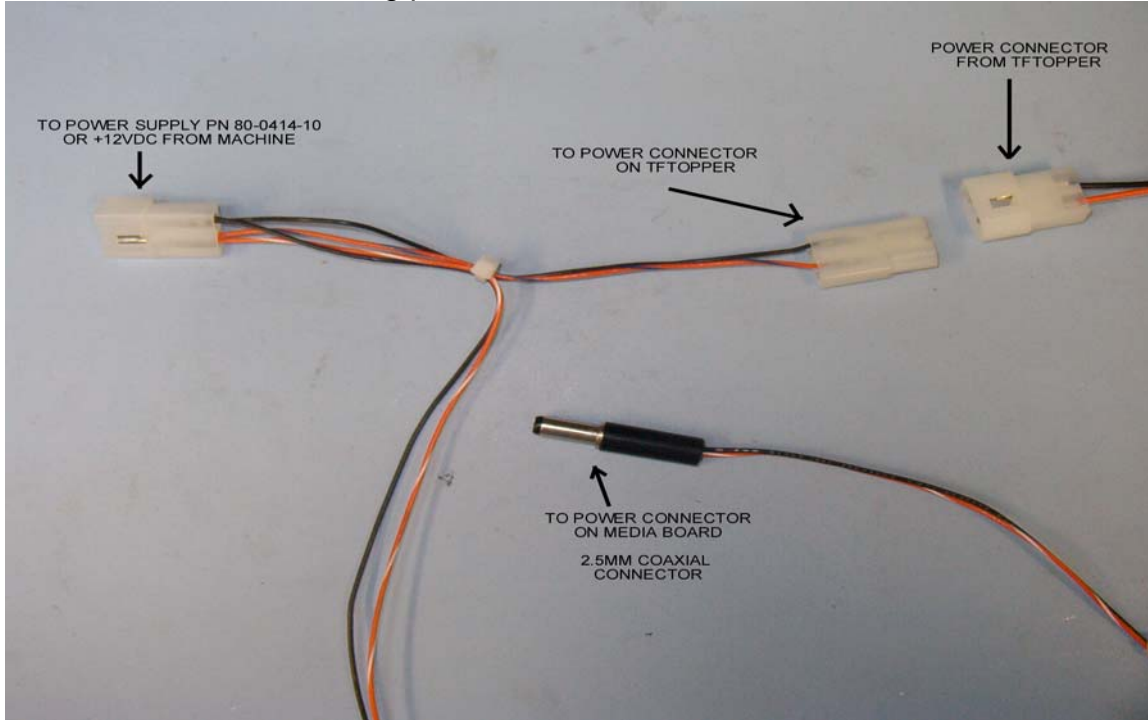


Take the Power Adaptor “Y” harness (PN 96-0781-00)
And locate the 2 position connector on it that has female terminals.
This plugs into the Main Power Harness from TFTOPPER

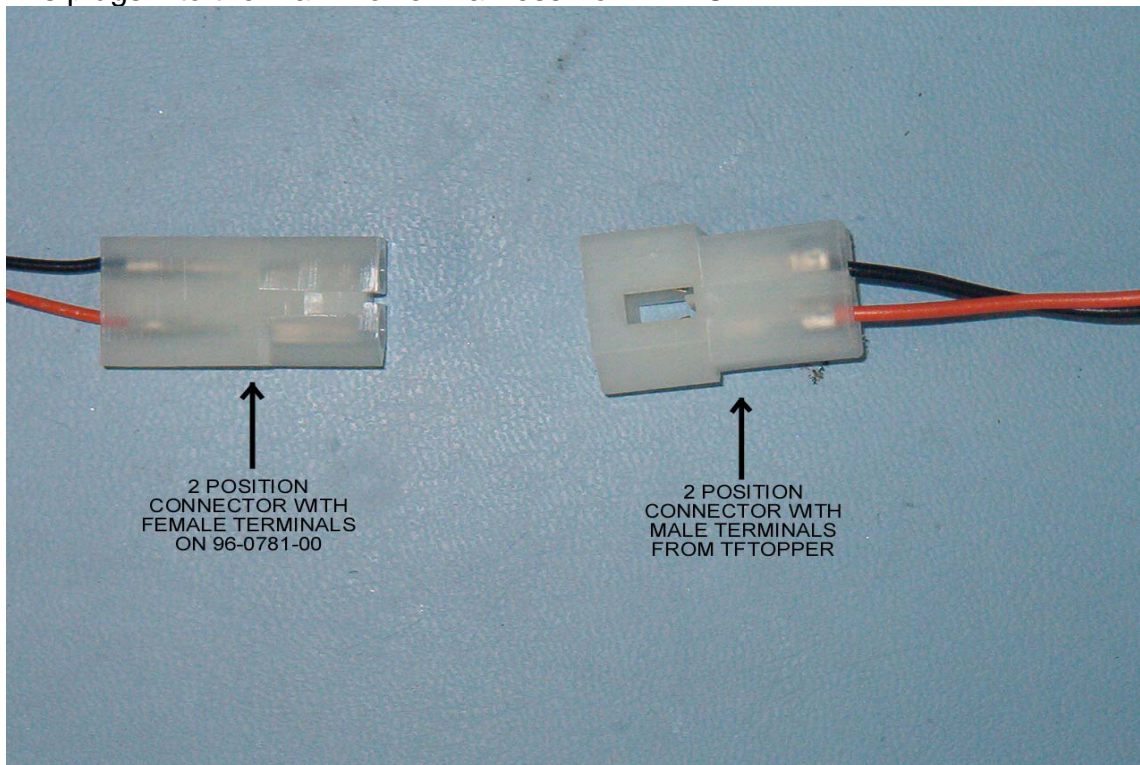


Plug these two connectors together.

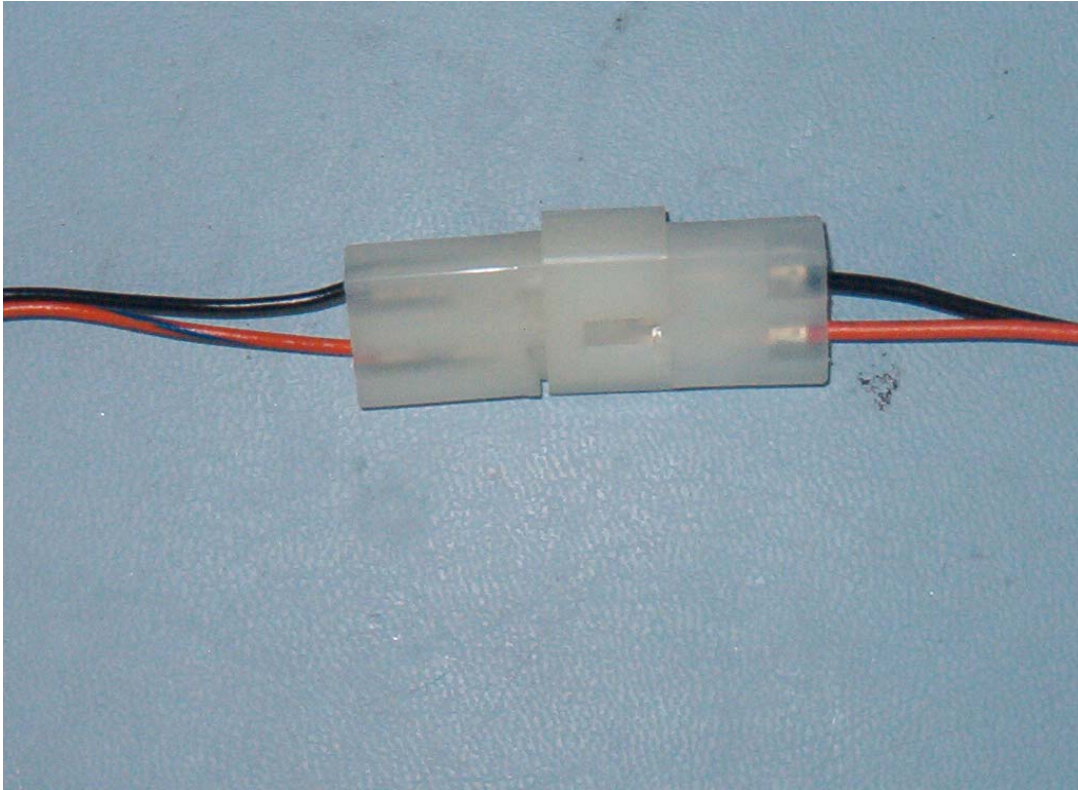



Attach the mounting feet to the Media Board.

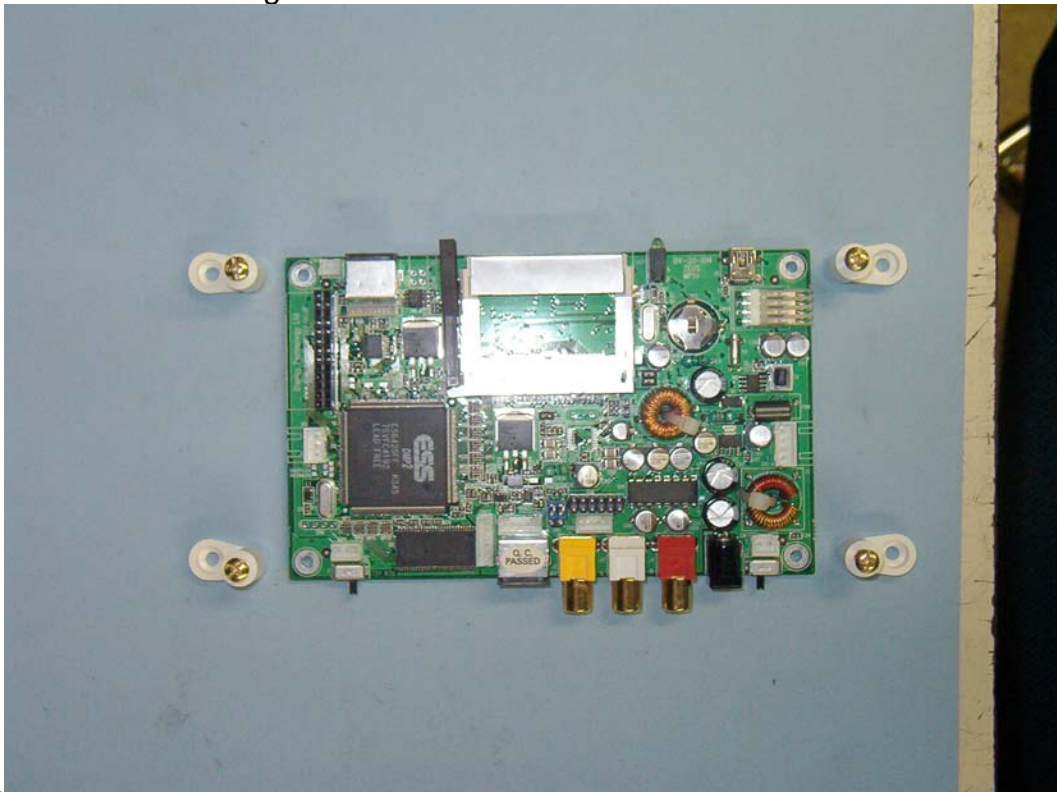

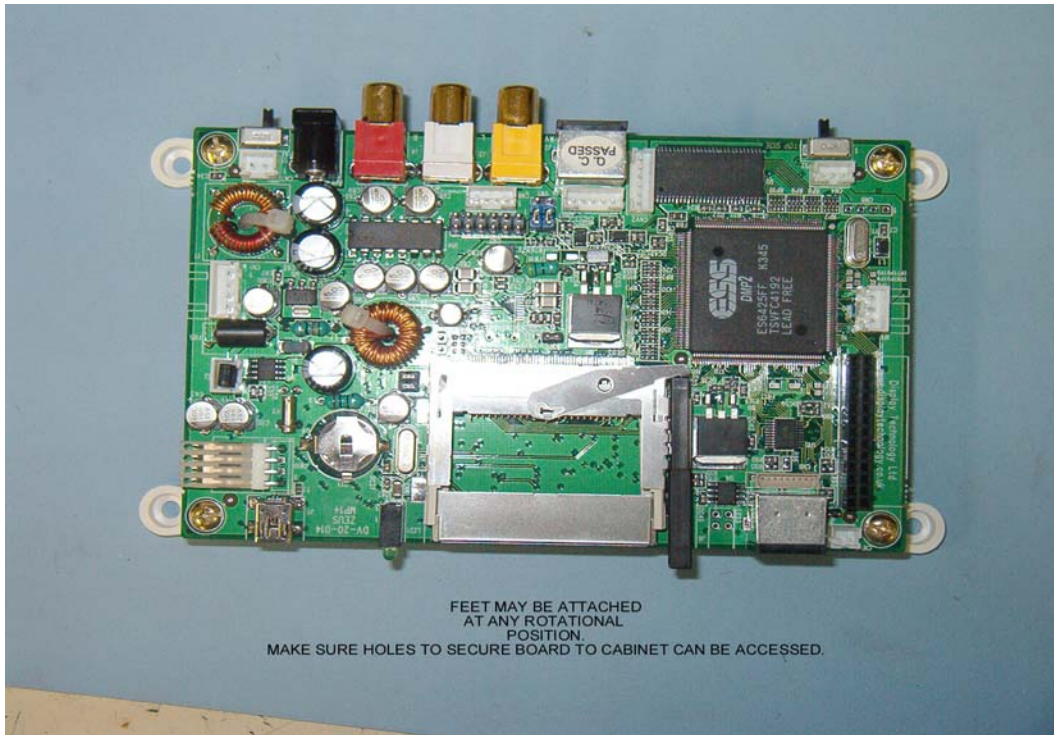



Next locate the power connector on the Media board and the 2.5MM Connector on the Power “Y” Adaptor.
Plug the 2.5MM Coaxial connector into the power receptacle on the Media Board.

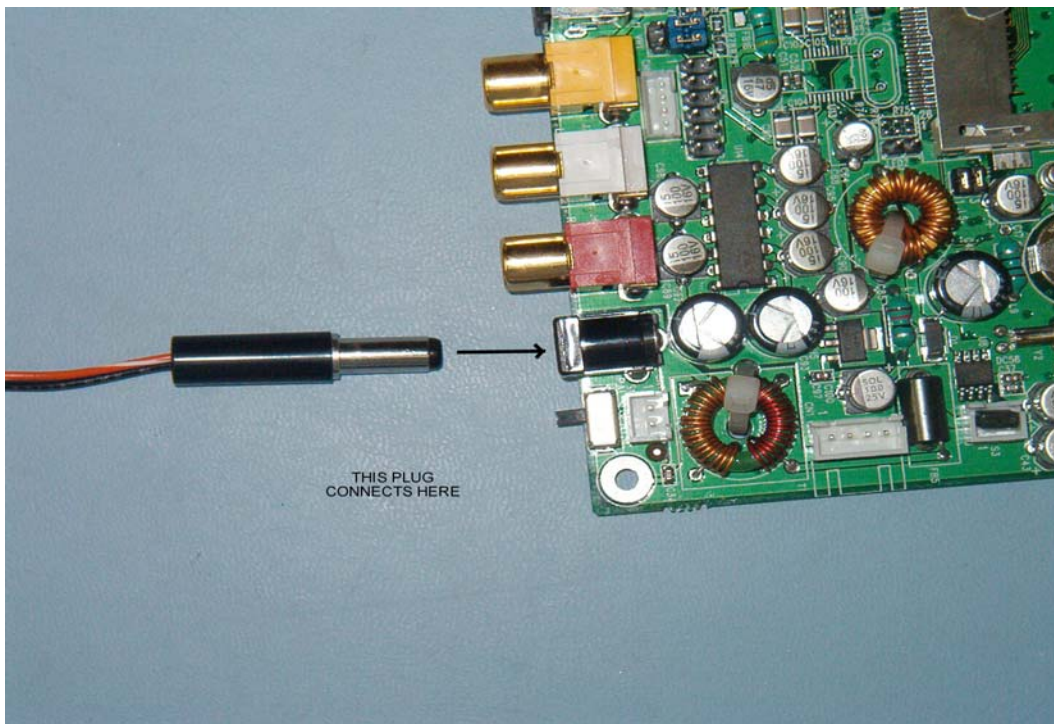

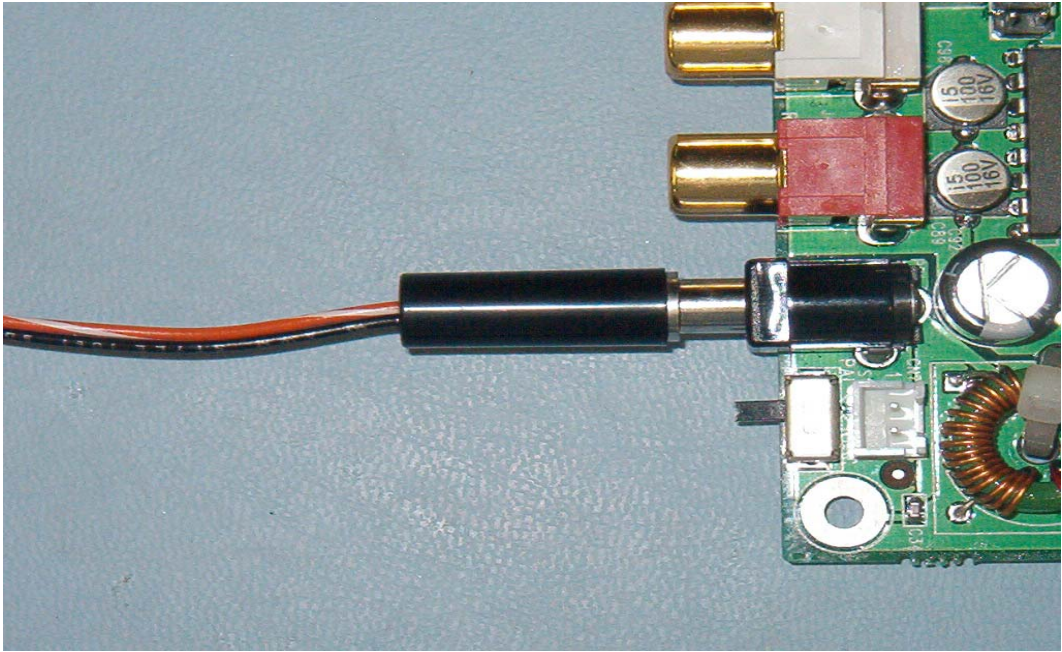


Next connect the Video cable for the TFTOPPER to the Media Board as shown below.

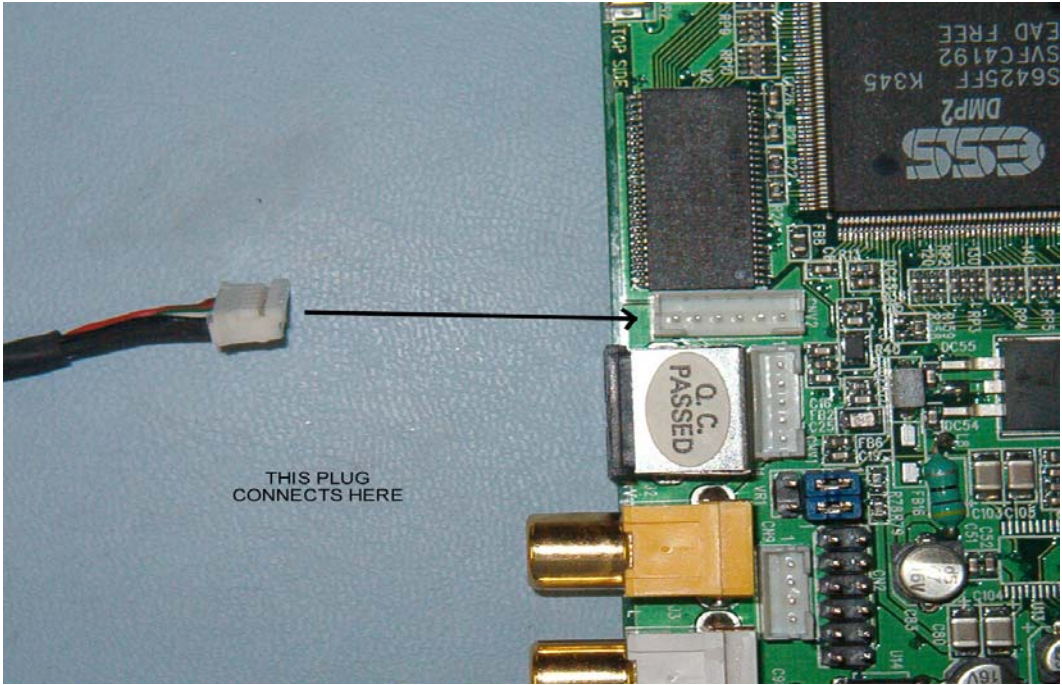

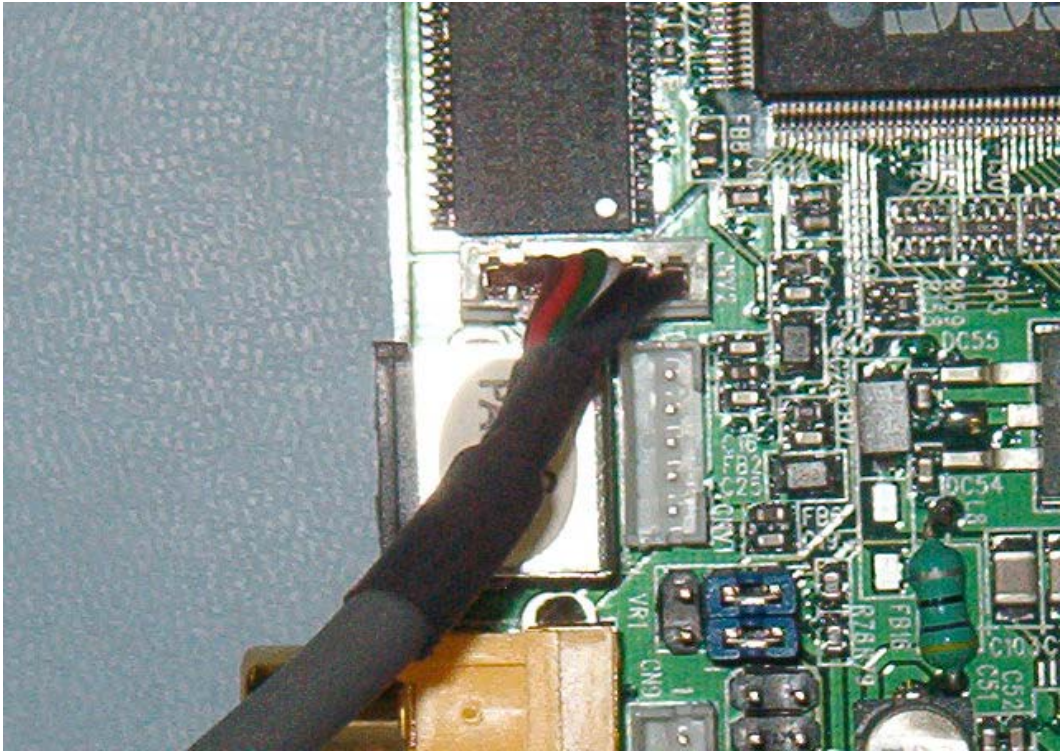

Now insert the Memory card into the Media Board.



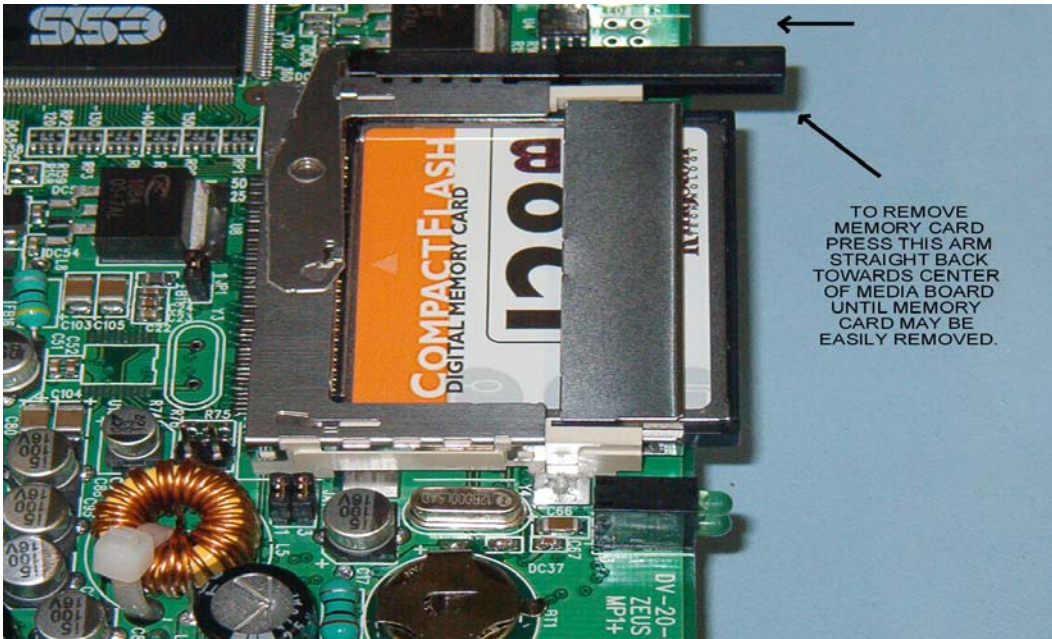

Finally secure Media board to inside of cabinet by means of hole in mounting feet.
Tie up any loose wires and connect main power from power supply to open 2 position connector on Power Adaptor "Y" harness.